


How many expansions can I connect ?

The total maximum number of expansions connectable to our PLC is 31. Obviously in accordance to the dip-switches number. In the following table is displayed the maximum address number for any expansion.

Model	Max Address for expansions connected to <u>D, Fujitsu and 36109 systems</u>	Max Address for expansions connected to <u>standard systems</u>
DLC0808	No	3
DLC0808/D	4	No
DLC0808B	7	3
DLC0808C	31	3
DLC0404	31	3
DLC0408	31	3
DLC080G	31	No
DLC8410	15	15
DLC4008	7	7
DLC0080	31	31

 = This expansions can be connected to other kind of expansions.

 = This expansions must be connected to COM0 and this serial port will be dedicated to this expansion/s.

